





Wariant LEWY  
Variant L

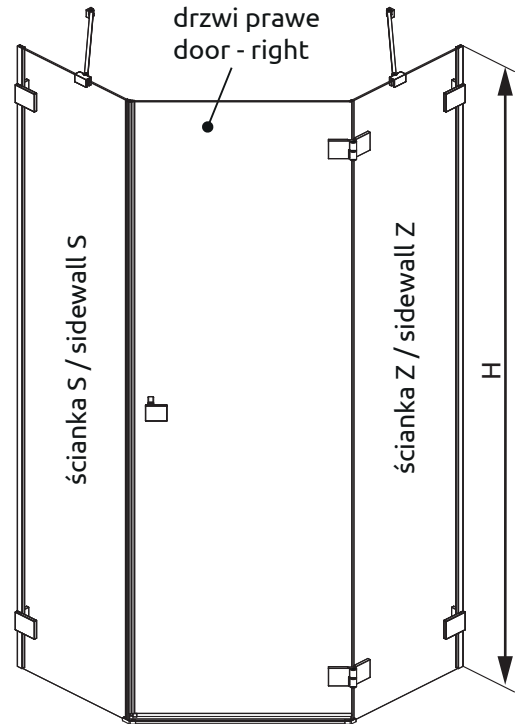

Wariant PRAWY  
Variant R

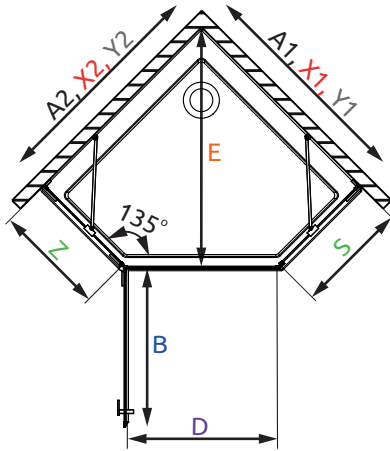

Wariant LEWY / Variant L

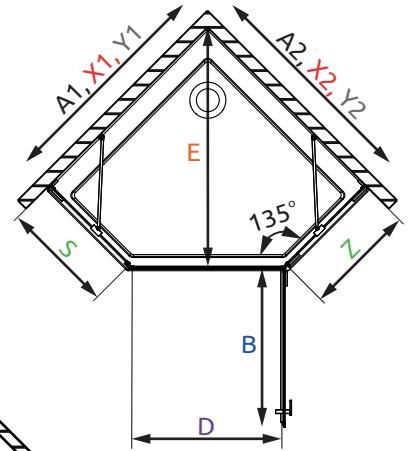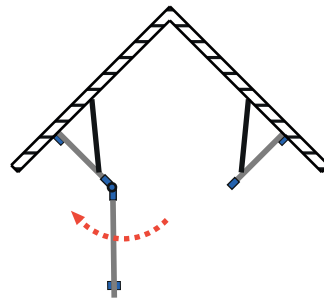

Wariant PRAWY / Variant R

Model	A1	A2	X1	X2	Y1	Y2	B	Z	S	D	E	H
PTJ 80Zx80S	800	800	789-797	789-797	776-784	776-784	638	345-353	340-348	600	785-796	2000
PTJ 80Zx90S	800	900	789-797	889-897	776-784	876-884	638	345-353	440-448	600	856-867	2000
PTJ 80Zx100S	800	1000	789-797	989-997	776-784	976-984	638	345-353	540-548	600	927-938	2000
PTJ 90Zx80S	900	800	889-897	789-797	876-884	776-784	638	445-453	340-348	600	856-867	2000
PTJ 90Zx90S	900	900	889-897	889-897	876-884	876-884	638	445-453	440-448	600	927-938	2000
PTJ 90Zx100S	900	1000	889-897	989-997	876-884	976-984	638	445-453	540-548	600	997-1008	2000
PTJ 100Zx80S	1000	800	989-997	789-797	976-984	776-784	638	545-553	340-348	600	927-938	2000
PTJ 100Zx90S	1000	900	989-997	889-897	976-984	876-884	638	545-553	440-448	600	997-1008	2000
PTJ 100Zx100S	1000	1000	989-997	989-997	976-984	976-984	638	545-553	540-548	600	1068-1079	2000